

## FCC Statement

Your radio might cause TV or radio interference even when it is operating properly. To determine whether your radio is causing the interference, turn it off. If the interference goes away, your radio is causing it. Try to eliminate the interference by:

- Moving your radio from the receiver
- Contacting your local Radio Shack store for help

If you cannot eliminate the interference, the FCC requires that you stop using the radio.

## Caring for Your Radio

To enjoy your radio for a long time:

- Handle it gently.
- Keep it away from dust, moisture, and temperature extremes.
- Clean it with a damp cloth. Do not use harsh chemicals.
- Do not take it apart. If something is wrong with the radio, take it to your local Radio Shack store for assistance.

## Listening Safely

To protect your hearing when using earphones, set the volume to the lowest setting before you begin listening, then adjust it to a comfortable level. Wearing earphones while driving a car or riding a bicycle can create a traffic hazard and is illegal in some areas.

### RADIO SHACK LIMITED WARRANTY

This product is warranted against defects for 90 days from date of purchase from Radio Shack company-owned stores and authorized Radio Shack franchisees and dealers. Within this period, we will repair it without charge for parts and labor. Simply **bring your Radio Shack sales slip** as proof of purchase date to any Radio Shack store. Warranty does not cover transportation costs. Nor does it cover a product subjected to misuse or accidental damage.

EXCEPT AS PROVIDED HEREIN, RADIO SHACK MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. Some states do not permit limitation or exclusion of implied warranties; therefore, the aforesaid limitation(s) or exclusion(s) may not apply to the purchaser.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

*We Service What We Sell*

9/94

**RADIO SHACK**  
**A Division of Tandy Corporation**  
**Fort Worth, Texas 76102**

9A5

Printed in the Philippines

# Radio Shack AM Pocket Radio

n Great AM Sound  
n Built-In Speaker  
n Earphone Supplied

## Owner's Manual

Cat. No. 12-207

## INSTALLING BATTERIES

**Two AA Batteries**  
(Cat. No. 23-552/557)

### Cautions:

- Match the polarity symbols (+ and –) marked inside the battery compartment.
- Always use fresh batteries of the required size and type.

## USING THE RADIO

**Note:** To improve reception, adjust the radio's position.

Rotate to select your favorite station

Switch to turn the radio on and off; rotate to adjust the volume (see "Listening Safely")

For connecting the supplied ear-phone

© 1995 Tandy Corporation.  
All Rights Reserved.

Radio Shack is a registered trademark used by Tandy Corporation.